


Windsor Chairs

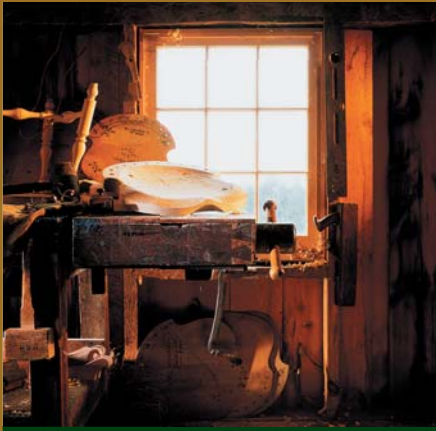

1022
Three Back Writing
Arm Chair
New England Vase Leg

Height 47 1/2"
Width 38"
Seat Depth 16 1/2"
Seat Width 28"

Writing Arm chairs are one of the most practical forms ever created. They are known for the pad (usually right but available left) attached to the arm. Early pads appeared to be clumsily added to an existing chair design. Over time they were better integrated into the overall composition. This piece is particularly highly developed with a sweeping pad arm balanced by a finely carved knuckle opposite. The chair has the glued arm and bent bow topped by a nicely carved crest rail. Thus, the



D.R.DIMES®
American Furniture